

	Parts Per Hoist		Hoist Capacity Code													
			001H	003S	003H	005L	005S	010L	020C	010S	015S	020L	020S	030C	025S	050L
Bottom Hook Complete Set	S/D	1	ER2B-H1011	ER2B-S1011	ER2C-H1011	ER2C-L1011	ER2C-S1011	ER2D-S1011	ER2D-R1011	ER2D-S1011	ER2E-M1011	ER2ES1011	ER2E-R1011	ER2F-S1011	ER2F-R1011	
Cushion Rubber	S/D	1	ER2BS9053		ER2CS-9053	ER1CS9053		ER1DS9053			ER1ES9053		ER1EM9053			
Chain Spring	S/D	(x)							ER1D-S9051 (2)				ES047015	ES04-7015 (2)	ER1E-M9051	ER1F-H9051 (2)
Forward / Reverse Contactor (For 208-230V Applications)	S	1	MGC22406A		MGC2-3406A	MGC2-2406A	MGC23406A					MGC23406B				
Forward / Reverse Contactor (For 415-460V Applications)	S	1	MGC22406A		MGC2-3406A	MGC2-2406A	MGC23406A					MGC23406B				
E-Stop Contactor (For 208-230V Applications)	S	1	MGC13306F													
E-Stop Contactor (For 415-460V Applications)	S	1	MGC13306F													
Fuse for Trans. Secondary Voltage = 110V)	S	1	9006271		9006272	9006271	9006272									
	D	1	9006271													
V Ring	S/D	1	ER2CS9210						ER2DS9210			ER2ES9210				
Packing C	S/D	1	ER2BS9117		ER2CS9117			ER2DS9117			ER2ES9117			ER2FS9117		
Chain Lubricating Grease	S/D	1	ER1BS1951													

In the column "Parts Per Hoist" a designator is used for parts that apply to a particular model or option. The designators are:

S = Single Speed

D = Dual Speed

S/D = Both Single Speed and Dual Speed