

**Cord Models – AH500C and AH250C****Main Body:**

(see Owner's Manual Section 10.1)

Figure Number	Name	Parts Per Hoist	Part Number
55	Vane	6	AH137102018
57	Bearing	2	9001208
60	Retaining Ring	1	9047112
72	Brake Disk	1	AH426205430
75	O-Ring	1	AH131103047
76	O-Ring	1	AH131103042
92	Chain Separator	1	AH136610025
96	O-Ring	2	TCR131103004
121	Bearing	2	9001208
123	O-Ring	1	AH131103047
124	O-Ring	1	TCR131103004
127	Retaining Ring	3	9047112

**Valve Body:**

(see Owner's Manual Section 10.2)

Figure Number	Name	Parts Per Hoist	Part Number
16	Valve Packing	1	AH136102151
17	Under Packing	1	AH136102153
23	O-Ring	2	AH131117004
24	O-Ring	2	AH131103003
26	O-Ring	2	AH131103016
38	Hair Pin Cotter	1	AH130790008
39	Parallel Pin	3	AH130406017

### Pendant Models – AH500P and AH250P

**Main Body:**

(see Owner's Manual Section 10.1)

Figure Number	Name	Parts Per Hoist	Part Number
55	Vane	6	AH137102018
57	Bearing	2	9001208
60	Retaining Ring	1	9047112
72	Brake Disk	1	AH426205430
75	O-Ring	1	AH131103047
76	O-Ring	1	AH131103042
92	Chain Separator	1	AH136610025
96	O-Ring	2	TCR131103004
121	Bearing	2	9001208
123	O-Ring	1	AH131103047
124	O-Ring	1	TCR131103004
127	Retaining Ring	3	9047112

**Valve Body:**

(see Owner's Manual Section 10.2)

Figure Number	Name	Parts Per Hoist	Part Number
16	Valve Packing	1	AH136102151
17	Under Packing	1	AH136102153
23	O-Ring	2	AH131117004
24	O-Ring	2	AH131103003
26	O-Ring	2	AH131103016
38	Hair Pin Cotter	1	AH130790008
39	Parallel Pin	3	AH130406017
164	O-Ring	2	TCR131103008
167C	O-Ring	2	AH131118012
167D	O-Ring	2	AH131117013

**Manipulator Models – AH500M and AH250M****Main Body:**

(see Owner's Manual Section 10.1)

Figure Number	Name	Parts Per Hoist	Part Number
55	Vane	6	AH137102018
57	Bearing	2	9001208
60	Retaining Ring	1	9047112
72	Brake Disk	1	AH426205430
75	O-Ring	1	AH131103047
76	O-Ring	1	AH131103042
92	Chain Separator	1	AH136610025
96	O-Ring	2	TCR131103004
121	Bearing	2	9001208
123	O-Ring	1	AH131103047
124	O-Ring	1	TCR131103004
127	Retaining Ring	3	9047112

**Valve Body:**

(see Owner's Manual Section 10.2)

Figure Number	Name	Parts Per Hoist	Part Number
16	Valve Packing	1	AH136102151
17	Under Packing	1	AH136102153
23	O-Ring	2	AH131117004
24	O-Ring	2	AH131103003
26	O-Ring	2	AH131103016
38	Hair Pin Cotter	1	AH130790008
39	Parallel Pin	3	AH130406017

**Manipulator Control:**

(see Owner's Manual Section 10.3)

Figure Number	Name	Parts Per Hoist	Part Number
222	O-Ring	2	AH131118012
223	O-Ring	2	AH131117013
233	Hook Protector	1	AH136201200
236	Rubber Bushing	1	AH136608251
237	O-Ring	8	AH131103013