



**L4LB Manual Hoist  
Recommended Spare Parts  
3/4 to 9 Ton**

Name	Parts Per Hoist	3/4 Ton	1 Ton	1 1/2 Ton	2 Ton	3 Ton	6 Ton	9 Ton
Top Hook Assembly	2	L41001008	L41001010	L41001015	L41001020	L41001030	L41001060	L41001090
Bottom Hook Assembly	2	L41021008	L41021010	L41021015	L41021020	L41021030	L41021060	L41021090
Safety Lever Assembly	4	L41071008		L41071015		L41071030	L41071060	L41071090
Chain Pin	1	L4041008		M3041015		M3041025	M3041075	
Slotted Nut	1	M3049005		M2049010			M2049020	
Split Pin	2	9009402		9009411			9009412	
Friction Plate	2	L4151008				L4151015		
Pawl Spring	2	L4158008				L4158015		
Chain Guide	2	L4161008		L4161015			L4161030	
Snap Ring	2	L4188008				L4188015		
Lever Assembly	1	L46211008				L46211015		
Cam Guide	1	L4203008				L4203015		
Idle Spring	1	L4205008				L4205015		
Spring Holder	1	L4208008				L4208015		
Brake Spring	1	L4207008				L4207015		
Pinion	1	L4111008		L4111015			L4111030	
Gear #2	2	L45112008		L45112015			L45112030	