



## RHN Wire Rope Trolley Hoist Recommended Spare Parts 2 to 20 Ton

<b>HOIST PARTS</b>														
Part Description	Parts Per Hoist	Hoist Capacity Code												
		RHN02		RHN03		RHN05		RHN08		RHN10		RHN15		RHN20
		U	D	U	D	U	D	U	D	U	D	U	D	D
Safety Catch	1	RHN0062				RHN0131				RHN0353		RHN0284		
Wire Rope, 20ft lift (*28ft lift)	1	RHN0013		RHN0095		RHN0098		RHN0161		RHN0323*		RHN0246		
Wire Rope, 33ft lift (*46ft lift)		RHN0016		RHN0096		RHN0097		RHN0164		RHN0321*		RHN0256		
Rope Guide	1	RHN0008		RHN0093		RHN0158		RHN0322		RHN0241				
Rope Pulley	3	RHN0032		RHN0118		RHN0191		RHN0327		RHN0260				
Hoist Motor Brake Assembly, 208-460V	1	RHN0358		RHN0368		RHN0373		RHN0373		RHN0384				
Hoist Motor Brake Assembly, 575V		RHN0359		RHN0369		RHN0374		RHN0374		RHN0385				
Load Sensor Unit	1	RHN0552		RHN0553		RHN0556		RHN0559						
Capacity Label (Panel Cover)	1	RHN0630	RHN0631	RHN0632		RHN0633	RHN0634	RHN0635		RHN0636				
Capacity Plate (Hook Block)	2	RHN0049	RHN0056	RHN0135		RHN0202	RHN0203	RHN0354		RHN0285				
Block Operated Limit Switch	1	RHN0550												

<b>TROLLEY PARTS</b>									
Part Description	Parts Per Hoist	Hoist Capacity Code							
		RHN02U	RHN03U	RHN05U		RHN08U	RHN10U	RHN15U	RHN20
Trolley Motor Brake Assembly, 208-460V	1	RHN0388				RHN0403		RHN0407	
Trolley Motor Brake Assembly, 575V		RHN0389				RHN0404		RHN0408	
Trolley Motor Rectifier, 208V	1	RHN0397							
Trolley Motor Rectifier, 230-575V		RHN0398							
Trolley Wheel - Drive	2	RHN0072		RHN0138		RHN0213		RHN0295	
Trolley Wheel - Non-drive	2	RHN0073		RHN0139		RHN0214		RHN0296	
Trolley Bumper	4	RHN0145				RHN0204		RHN0314	

Under the "Hoist Capacity Code," a designator is used for parts that apply to a particular model or option. The designators are:

- D = Deck Mounted
- U= Ultra-Low Trolley Hoist

460/575V CONTROL PANEL BOX PARTS														
Part Description	Parts Per Hoist	Hoist Capacity Code												
		RHN02		RHN03		RHN05		RHN08		RHN10		RHN15		RHN20
		U	D	U	D	U	D	U	D	U	D	U	D	D
K10 Contactor	1	RHN0506						RHN0519				RHN0536		
K23-24 Contactor	2	RHN0506						RHN0519				RHN0536		
K25 Contactor	1	RHN0508						RHN0520				RHN0537		
K29	1							RHN0528						
K41-42 Contactor	1	RHN0509		RHN0509		RHN0509		RHN0509		RHN0509		RHN0509		
K45 Contactor	1	RHN0510		RHN0510		RHN0510		RHN0510		RHN0510		RHN0510		
Q29 Circuit Breaker	1							RHN0522						
Transformer, 460V	1	RHN0512						RHN0523				RHN0534		
Transformer, 575V		RHN0513						RHN0524				RHN0535		
Fuse Link, F41-F43	3	RHN0502		RHN0502		RHN0502		RHN0502		RHN0502		RHN0502		
Fuse Link, F101-F102	2							RHN0518				RHN0502		
Rectifier, G21	1	RHN0503						RHN504						

208/230V CONTROL PANEL BOX PARTS														
Part Description	Parts Per Hoist	Hoist Capacity Code												
		RHN02		RHN03		RHN05		RHN08		RHN10		RHN15		RHN20
		U	D	U	D	U	D	U	D	U	D	U	D	D
K10 Contactor	1	RHN0519						RHN0543						
K23-24 Contactor	2	RHN0519						RHN0543						
K25 Contactor	1	RHN0520						RHN0537						
K29	1							RHN0528						
K41-42 Contactor	1	RHN0509		RHN0509		RHN0509		RHN0509		RHN0509		RHN0509		
K45 Contactor	1	RHN0510		RHN0510		RHN0510		RHN0510		RHN0510		RHN0510		
Q29 Circuit Breaker	1							RHN0544						
Transformer, 208/230V	1	RHN0539						RHN0545						
Fuse Link, F41-F43	3	RHN0529		RHN0529		RHN0529		RHN0529		RHN0529		RHN0529		
Fuse Link, F101-F102	2							RHN0541						
Rectifier, G21	1	RHN0503						RHN0542						

Under the "Hoist Capacity Code," a designator is used for parts that apply to a particular model or option. The designators are:

- D = Deck Mounted
- U= Ultra-Low Trolley Hoist