



**EQ and SEQ Electric Hoist**  
 Recommended Spare Parts  
 1/8 ton to 1 ton

**PURPOSE**

Recommended Spare Parts List

**SCOPE**

EQ and SEQ Product 1/8 ton through 1 ton capacity.

Part Description	Parts Per Hoist		Hoist Capacity Code			
			001SD	003SD	005SD	010SD
Bottom Hook Complete Set	EQ/SEQ	1	EQ1CG1011	EQ1CF1011	EQCI1011	EQ1DI1011
Chain Spring	EQ/SEQ	1			EQ1CI9051	EQ1DI9051
Pendant w/Cord Complete Assembly	EQ/SEQ	1	ZLD001AV1000			
Limit Switch Complete Set	EQ/SEQ	1	EQ1CI1333			EQ1DI1333
Dual Power Converter	SEQ	1	ECP91KB64			

In the column "Parts Per Hoist" a designator is used for parts that apply to a particular model or option. The designators are:

EQ = Used with EQ 3 – Phase Hoist

SEQ = Used with SEQ – Single Phase Hoist

**END**